



# AIR TANK HOLDER

HRP6370 Series Air Tank Holder Assembly Guide



### Included Components:

- Main Brackets (2)
- Side Plates (2)
- Face Plate (2)
- Rivets (8 each)



Rivet 1 side plate and Face Plate to a Main Bracket.

Take note in the photos as to how the brackets are positioned. Wall mount holes are located outwards- as to make them 16" on center for proper wall mounting.



Rivet second Face Plate to Main Bracket.



Repeat process for second Main Bracket, Side and Face Plates.



For tech assistance or replacement components, contact HRP at (262) 457-5015



[hrpracing.com](http://hrpracing.com)

[streetersuperstands.com](http://streetersuperstands.com)